



TOP BRANDS, BIG SAVINGS!

SERVING PROPERTY MANAGERS SINCE 1978

Spring into the Season with ARD!

*Limited time special
on select stainless
steel appliances!*



800.654.7721 | MARCH - JUNE 2020 PROMOTIONS

WHIRLPOOL STAINLESS STEEL PACKAGE
WITH COIL TOP RANGE



WRT318FMDM

Stainless Steel
*Ice maker included



ONLY \$729

WMH31017HS

Stainless Steel



ONLY \$217

WDF330PAHS

Stainless Steel



ONLY \$316

WFC310S0ES

Stainless Steel (Coil Top)



ONLY \$481

TOTAL = \$1743

*Taxes and accessories not included

Use Promo Code: **ARDSRING** when placing your orders to receive your discount.

WHIRLPOOL STAINLESS STEEL PACKAGE
WITH SMOOTH TOP RANGE



WRT318FMDM

Stainless Steel
*Ice maker included



ONLY \$729

WMH31017HS

Stainless Steel



ONLY \$217

WFE505W0JS

Stainless Steel (Smooth Top)



ONLY \$563

WDF330PAHS

Stainless Steel



ONLY \$316

TOTAL = \$1825

*Taxes and accessories not included

HOW TO CLEAN STAINLESS STEEL

Stainless steel has some unique cleaning characteristics. In order to keep your appliance looking like new, we recommend cleaning it with one of the following options.

General Cleaning:

For regular daily maintenance: Use mild soap (dish soap) and water.

Cerama Bryte® stainless steel appliance cleaner on stainless steel exteriors or interiors. Citrushine Stainless Steel Wipes, removes fingerprints, de-greases and shines without streaking.

For heavy soils: Use a paste of baking soda and water while rubbing with a soft cloth. Do not use appliance wax, polish, bleach, steel wool, abrasives, ammonia, acids or commercial oven cleaners.

Other Cleaning Suggestions:

For appliances previously cleaned with a mineral oil-based stainless cleaner: Before using the Cerama Bryte® stainless steel appliance cleaner, wash the surface with dish soap and water to remove oily residue. Then use a generous amount of Cerama Bryte® stainless steel appliance cleaner to clean the appliance. (Future cleanings require only the normal amount of Cerama Bryte®.)

For rust, tarnish, and small blemishes: Cleaners that contain Oxalic Acid, such as Bar Keepers Friend Soft Cleanser, will remove rust, tarnish, and small blemishes. Use only the liquid cleanser (free of grit) and be sure to rub in the direction of the metal grain lines with a damp soft sponge.

For discoloration: Use a stainless steel cleaner and polish in the direction of the brush marks with a soft sponge per the User's Manual. Do not use an abrasive 'green' scrub pad, as that can scratch the surface. This should remove the discoloration. Rinse cooktop surface well with water.

If the stainless is scratched, using one of these cleaning methods can often help reduce the appearance of the scratches. For visible scratches, there is not an approved repair method to cover the scratches.